

GP-Pro EX Quick Start Guides

AGP Offline



AGP Offline

➤ Overview:

 
- This module explains the use of the Offline menus to access various settings on the AGP Panel. Most of these settings can also be edited in the GP Pro EX development software.

➤ Objective:


- At the end of this module you can know:
 - How to enter the Offline menus; manually or through a switch.
 - How to find and edit various system settings.
 - How to restart the panel with new settings.

Offline

- The Offline menus can be accessed through a couple different mechanisms.
- Press the top left corner followed by the bottom right corner of the screen within 0.5 seconds.

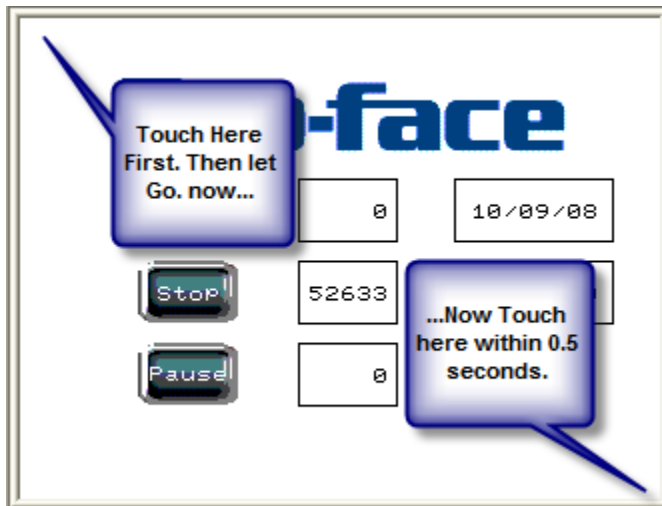

 
After a couple tries you should see this.

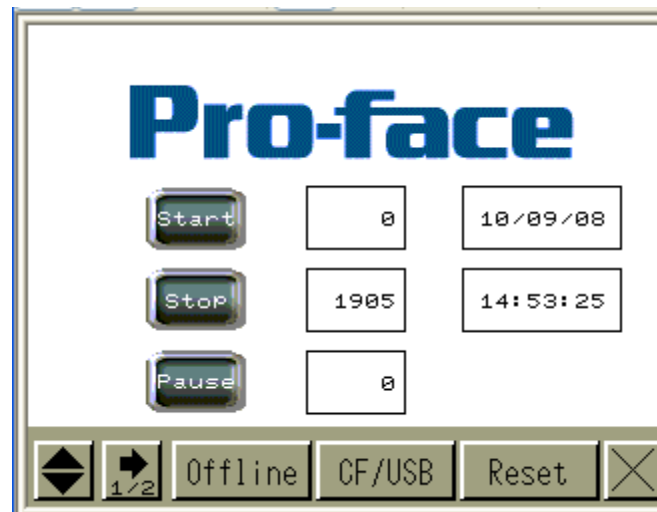

Press
“Offline”
to continue.


Offline -

 - Another way to access the Offline Screens is to use a Special Switch. Place a switch on the screen. Select Special Switch and select a Special Action of "Offline".

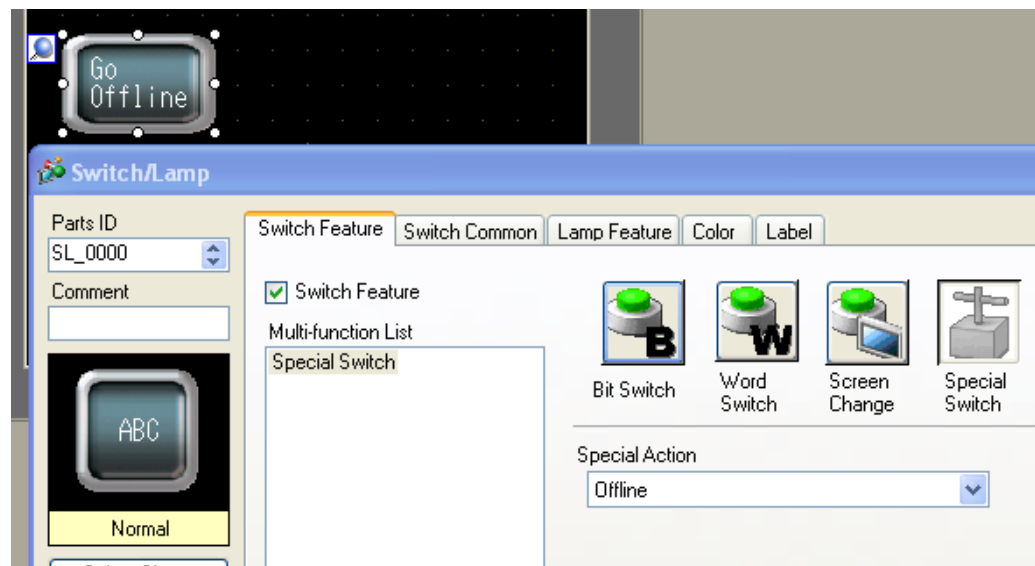

Offline -

 - Once you get to the Offline Screens you will see the following.

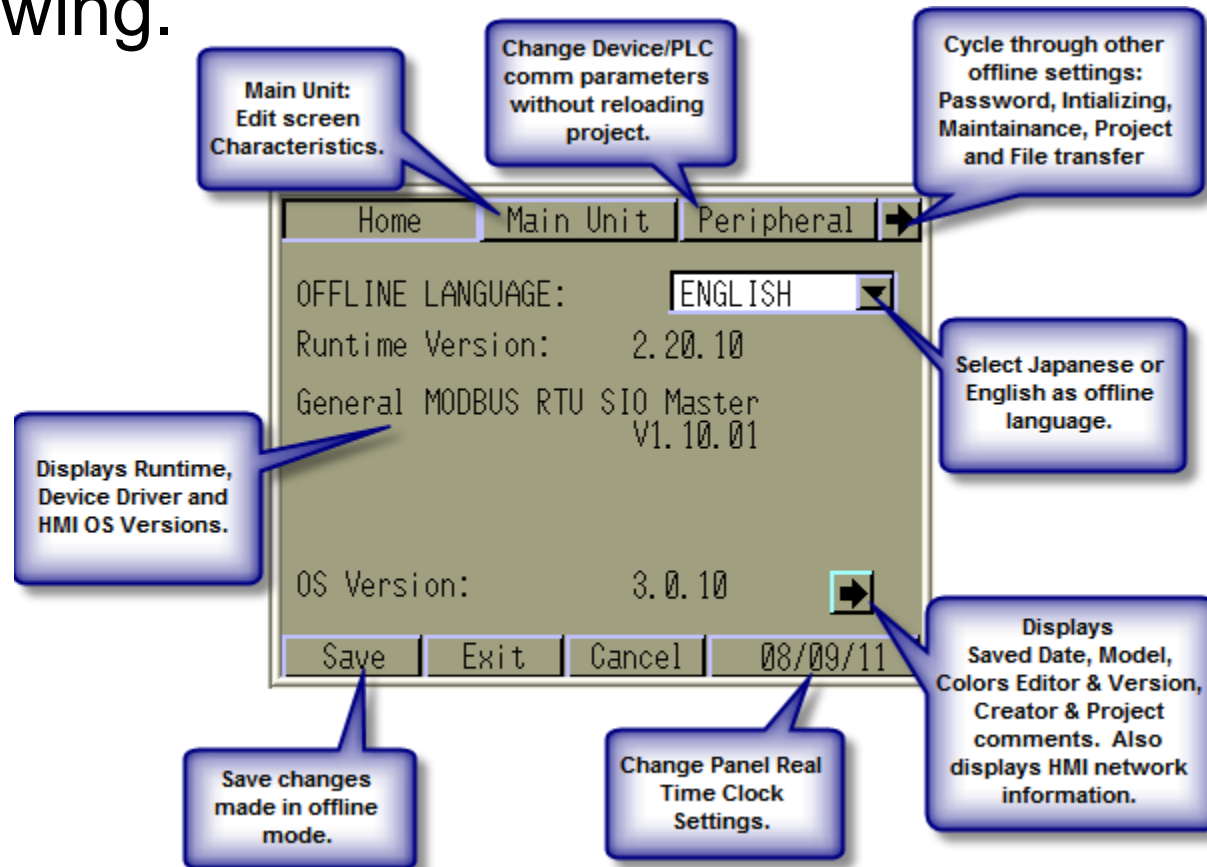

Main Unit Settings:

- Screen Settings
- Operation Settings
- Display Settings
- Menu & Error operations
- Global Window Operations
- System Area Usage
- Ethernet
- Extended
- Remote View

Peripheral Settings:

- Device / PLC Settings – Make test changes without have to adjust in project.
- Printer Settings
- Barcode Settings
- USB
- Script Settings

Password Settings / Initialize

System Password

- Security Password
- Initialize User Memory / Backup SRAM

Maintenance / Transfer / File

- Check Panel Operations: Screen Pattern / Fonts / Touch / Calibration / Ports / Memory / Color
- Transfer Project
- Load Text Table / CSV Data Index

Save / Exit / Cancel

- Save new settings (Stay in Offline Mode)
- Exit (save or lose new settings)
- Cancel (Revert to previous saved settings and Stay in offline mode)

Questions

Questions?

Please refer to the Reference Manual that is installed along with GPPRO-EX.

Manuals are also available on-line at:

<http://www.hmisource.com/otasuke/download/manual/>

For further support please e-mail: Support@profaceamerica.com

Or call: +1 734 429-4971